



PART LIST

No	Part Name	No	Part Name	No	Part Name
1	Recoil Pad Scrwe	24	Trigger Plate Pin Detent Spring	49	Piston
2	Recoil Pad	25	Trigger Plate Pin	50	Piston Seal
3	Stock	26	Safety Button	51	Breech Bolt
3a	Stock Inner Frame	27	Safety Button Detent Pin	52	Firing Pin
4	Stock Screw	28	Safety Button Spring	53	Firing Pin Spring
5	Stock Screw Washer	29	Safety Spring Retaining Pin	54	Firing Pin Retaining Pin
5a	Washer Stopper	30	Trigger	55	Extractor
6	Receiver	31	Trigger Sear	56	Extractor Plunger
7	Bolt Recoil Pad	32	Trigger Pin	57	Extractor Spring
8	Latch Tip	33	Trigger Spring	58	Extractor Pin
9	Latch Tip Pin	34	Trigger Sear Detent Spring	59	Bolt Handle
10	Latch Spring	35	Trigger Sear Detent Pin	60	Locking Block
11	Latch Pin	36	Carrier	60a	Locking Block Ball
12	Latch Pin Detent Spring	37	Carrier Dog	61	Barrel
13	Action Release Button	38	Carrier Dog Follower	61a	Barrel Rear Part
14	Action Release Button Spring	39	Carrier Dog Follower Spring	61b	Barrel Collar
15	Latch	40	Carrier Dog Follower Plate	61c	Front Sight
16	Magazine Tube	41	Hammer	61d	Barrel Bridge
17	Magazine Follower	42	Hammer Pin	61e	Ejektor Pin
18	Magazine Spring	43	Hammer Plunger	61f	O-Ring
19	Magazine Spring Retainer	44	Hammer Spring	62	Muzzle Cap
20	Forend	45	Action Spring	63	Magazine Capacity Plug
21	Magazine Cap	46	Action Bar		
22	Trigger Plate	47	Action Bar Sleeve		
23	Trigger Plate Pin Bushing	48	Piston Buffer		